

WASHING MACHINE
MOSÓGÉP
PRAČKA
TL 522 C

TECHNICAL INFORMATION

DIMENSIONS	Height with panel	895 mm
	Height without panel	850 mm
	width	397 mm
	depth	600 mm
POWER SUPPLY VOLTAGE / FREQUENCY		230 V / 50 Hz
TOTAL POWER ABSORBED		2300 W (10 A)
HEATER RATING		1950 W
WATER PRESSURE	minimum	5 N/cm ² (0,5 kg/cm ²)
	maximum	80 N/cm ² (8 kg/cm ²)
MAXIMUM LOAD	cotton	5 kg
	synthetics	2,5 kg
	wool	1 kg
SPINNING SPEED		500 rpm

This appliance complies with the following EC Directive:

- 72/23/EEC of 19.02.1973 - Low Voltage Directive
- 89/336/EEC of 03.05.1989 (including Amendment Directive 92/31/EEC) - EMV Directive.

SAFETY INSTRUCTIONS

You must read the whole of this instruction book before you use the appliance. Follow the advice carefully. Keep the book for future reference. If you sell or give away the appliance, make sure that the book is passed to the new owner. The following warnings are provided in the interest of overall safety. You must read them before the appliance is installed or used.

Use

- This appliance is designed to be used by adults. Children should not be allowed to touch the controls or play with the product.
- It is dangerous to modify the specifications of this appliance in any way.
- Always unplug the appliance and turn off the water after use.
- Only wash fabrics which are designed to be machine washed. If in doubt, follow the instructions you find on the label of the item itself.
- Place small metal rings or edged plastic rings in a net or bag.
- Make sure that all pockets are empty. Hard, sharp objects such as coins, safety pins, nails, screws or stones can cause extensive damage.
- Do not machine wash fabrics which are saturated with petroleum products. If volatile cleaning fluids have been used, make sure that they are thoroughly removed from the fabrics before they are placed in the appliance.
- Small and delicate objects (e.g. baby socks, stockings) can be easily washed inside a small pillowcase with a zip fastener or in larger socks.
- Use only the recommended quantities of fabric conditioner.
- Before cleaning, care and maintenance, ensure that the machine is switched off.

Installation


- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person.
- Make sure that the appliance does not stand on its electrical supply cable.

- This appliance is heavy. Care should be taken when moving it.
- All packaging and transit bolts must be removed before the appliance is used. Serious damage may occur if this is not done.
- If your washing machine is in a room subject to temperatures below freezing, the water must be removed from the machine should the danger of freezing be expected.

Safeties

- **Lid** : your washing machine is equipped with a safety avoiding the switching of the appliance when the flapdoors of the drum are opened ; the closure of the lid is so impossible. An electromechanic safety prohibits the opening of the lid when the washing machine works and 2 minutes after the end of the programme.
- **Washing motor** : in case of mechanic overloading, overvoltage, a thermic safety protects automatically the motor.
- **Heating** : the heating can only begin when the water quantity necessary for the washing is in the tub. This safety is useful when there is a water break-up or if you forget to open the water inlet hose.
- When disposing of the machine in a proper manner, destroy the door locks and cut off the power supply cord.

Environmental information

All materials marked by the symbol  are biodegradable. They can be disposed of without danger or burnt in rubbish incinerators.

In order to realize water and energy savings and to act in an environmentally conscious manner, we advise to follow the below instructions :

- use if possible the appliance with full loads instead of partial loads. Take care to do not overload the drum.
- Use only the programmes with prewash for very soiled laundry.
- Savings on detergent and for the environment may also be achieved if with medium to hard water you add sufficient detergent for soft water and then add separately a softener. This relieves our waters of a certain amount of chemicals.

INSTALLATION

BE CAREFUL : The parts protecting the inner components of the machine during transit are red. They must all be removed before using your machine for the first time. In order to avoid possible damage to the appliance, it is indispensable to take away the polystyrene basis, the two red loosened spacers at the back of the appliance and the polystyrene wedge (follow the instructions of the unpacking sheet). Close imperatively the 2 holes left by the 2 spacers with the plugs provided with the appliance ; do not forget to put on the central cover.

Installation


The floor must be clean and dry, free from floor polish and other greasy substances, so that the machine does not slide about. Do not use any grease as lubrication.

Installation on deep pile carpets and floor coverings with foam backings is not recommended, as the stability of the machine is no longer guaranteed. If the installation must be done on a carpeted floor, the openings located at the lower part of the back of the appliance must remain free. These openings ensure a good ventilation of your appliance. In case of small format tiles, place a standard rubber mat under the machine.


With sprung floors, in particular wooden plank floors with yielding floor boards, screw down a waterproof wooden base at least 15 mm thick, across at least 2 floor boards. Wherever possible, place the appliance in the corner of the room - there wooden floors are most secure and least liable to resonance vibrations.

Never compensate for small unevennesses in the floor by placing wood, pasteboard or such like.

The front adjustable feet must be blocked after installation of the appliance by means of the locking nuts.

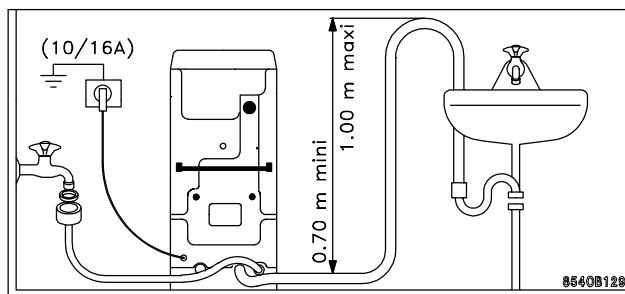

Water connection

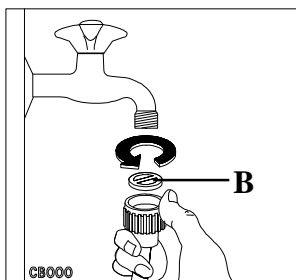

Connect the water inlet hose to a cold water tap with a 3/4" gas threaded orifice, after having inserted the rubber sealing washer into the hose collar. If the water connection is made onto new pipes or onto pipes which have not been used for a long time, it is advisable to run off a certain amount of water before connecting the machine.

Place the curved end of the outlet hose into a drain pipe having a height between 70 and 100 cm from floor level or secure it to a sink or bath tub. Make sure that the drain hose is firmly secured so that it will not slip out or fall down from its position.

The water should drain freely and, consequently, the drain hose should not be choked or placed in such a way as to obstruct the normal water flow. If an extension hose is required, remember that it might cause a malfunction in the drain pump, particularly if the extension has a length in excess of 1 meter or if the diameter of the extension is smaller than the diameter of the original drain hose.

Electrical connection

Before you fit the plug into the wall socket, check the following points :

- 1) The supply voltage of the domestic wiring system does not fluctuate by more than 10%, plus or minus, from 230 V.
- 2) The meter, the fuses, the supply line and the wall socket are suitable to carry the maximum load required by the machine (2,3 kW).



Very important :

The washing machine is provided with a feeding wire with earth connection: it must be connected to a plug like that is provided with a good earth connection.

The replacing of the power cord must only be realized by the After Sales Service.

The manufacturer declines any responsibility where the previous recommendations are not followed.

Levelling

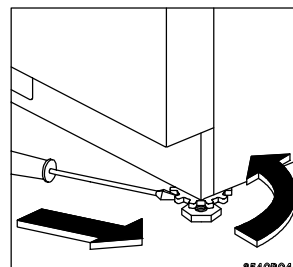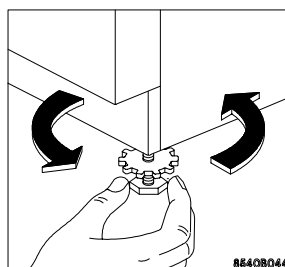


Carefully level the machine adjusting the levelling feet located at the front of the base and then tighten the lock nuts at the top of the feet.

USE OF YOUR APPLIANCE

The control panel

Never turn the programme selector when the appliance is working.

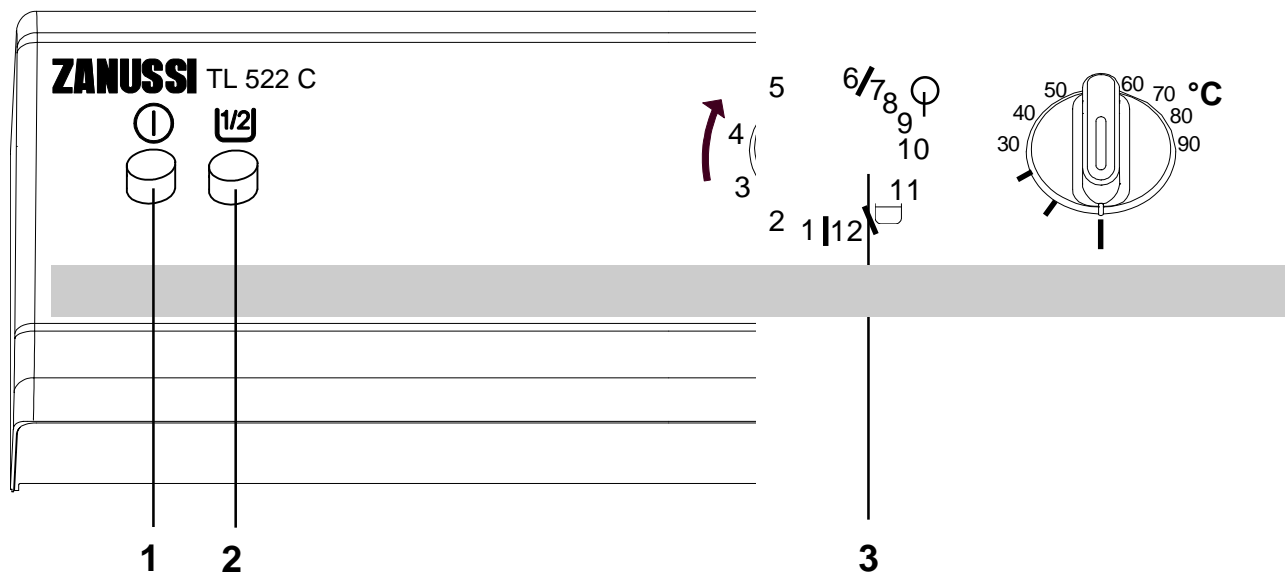

1 ON/OFF pushbutton "ⓘ"

Press the ON/OFF pushbutton, the programme starts.

2 Half load pushbutton "1/2"

This pushbutton allows to wash small quantity of linen not much soiled (2,5 kg) only on the cotton programmes by cancelling one rinsing.

3 Programme selector

It enables to select the most adapted programme to the nature and degrees of soil of your laundry.

Turn the programme selector clockwise to select the chosen programme.

The programme selector indicates each programme phase as it takes place.


At the end of the programme, the appliance stops automatically on a position off "I" or on the position rinse hold "Ⓜ".

Never turn the programme selector anticlockwise.

4 Temperature selector

It enables to choose the most adapted temperature between cold ("I") and 90°C. Choose the temperature which corresponds to the chosen programme, with the help of the indications or the programme table, according to the fibers and the fastness of the colours.

Detergent dispenser

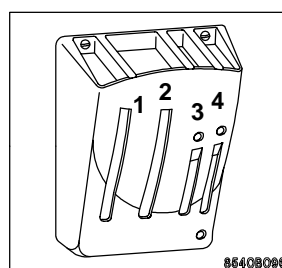

Symbols

(L) Washing powder or liquid detergent for programmes with pre-wash (1).

(L) Washing powder or liquid detergent for the main wash (2)

(Δ) Bleach compartment (3)






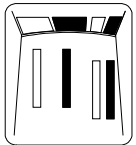

(⊗) Liquid additives (fabric softener and conditioner...) (4).

(●) Liquid detergent

PROGRAMMES CHART

Programmes for cotton/linen and for synthetics/delicates/wool

Maximum loads : 5 kg (cotton), 2,5 kg (synthetics), 1 kg (wool).

	Programmes description	Temperatures (°C)	Detergent dispensers to use	Water consumption in liters	Time in minutes
1	Whites with prewash	60-90		90	150
2	Whites without prewash	60-90		79	135
3	Resistant coloureds	40-60		79	110
4	Delicate coloureds	30-40		79	95
5	Rinsings		 *	60	50
6	Spinning			0	5
7	Synthetics with prewash	40-60		65	80
8	Synthetics	40-60		52	75
9	Delicates	30-40		52	55
10	Wool	✕-40		55	45
11	Rinsings			36	20
12	Draining			0	5

(*) If the laundry can withstand the bleaching treatment.

When the selected programme is over, the washing machine stops automatically. The timer knob stops on the position "I" by a spinning phase (for the cotton and linen programmes) or by a rinse hold (for the synthetics and wool programmes). You can end these programmes with a spinning (by setting the timer on the programme 6) or with a draining (by setting the timer on the programme 12). Please depress the ON/OFF pushbutton before doing your choice.


BE CAREFUL :

THE LID CAN ONLY BE OPENED 90 SECONDS AFTER THE MACHINE HAS STOPPED.

Operating instructions

1. Place the laundry in the drum

- lift up the lid of the machine
- open the drum with your two hands by pressing the button **A** and the two flapdoors till they disengage.
- introduce the laundry into the drum ; close the drum and the lid of the machine.

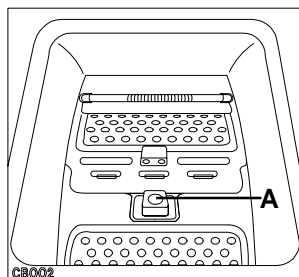

Be careful : before closing the lid of your machine, make sure that the drum flapdoors are correctly closed :

- the two flapdoors fastened
- the button **A** pressed out.

2. Measure out the detergent

Measure out the amount of detergent recommended by the manufacturer in the main wash compartment (L).

If you wish to carry out a prewash, pour the amount required into the prewash compartment (L).

Do not exceed the MAX level.

3. Add the bleach agent

You may use a bleach agent in all the washing programmes. However, make sure that the fabric withstands the treatment. Bleach is automatically washed down into the drum. pour 1/4 to 1 glass of 12° chl bleach into compartment marked (Δ) before switching the machine on.

Make sure that the level of the liquid never exceeds the MAX level.

4. Add the fabric softener

Pour the softener, if required, into the compartment marked (⊗). **Do not exceed the MAX level.**

5. Press the half load pushbutton "1/2" if required.

6. Select the temperature

Choose the temperature which corresponds to the chosen programme, with the help of the indications or the programme table, according to the fibers and the fastness of the colours.

7. Select the programme

Choose the programme according to the nature and the degree of soil of the laundry.

Turn the programme selector clockwise to select the chosen programme.

8. Starting of the programme

The ON/OFF pushbutton "ⓐ" enables to switch on your machine.

9. At the end of the programme

When the selected programme is over, the machine stops automatically. The timer knob stops on the position "I" for the cotton programmes. The synthetic programmes end by a rinse hold "ⓑ". You can finish these programmes by a spinning (programme 6) or a draining (programme 12). Depress the on/off pushbutton "ⓐ" before doing your choice.

After each wash, depress the on/off pushbutton. Press off the pushbutton if necessary ; unplug the machine from the wall socket ; turn off the water tap.

HINTS AND TIPS

You are advised not to leave your laundry too long, especially when damp. Damp laundry produces mould and unpleasant smells.

Mould stains cannot be removed.

Sort your laundry.

Study carefully the chart in this booklet explaining the symbols used on clothes labels (see page 6).

The following points are particularly important :

a line under the bowl means that the garment cannot be washed using programmes for resistant fabrics such as cotton and linen;

do not mix coloured garments with whites;

antcrease materials like polyester/cotton should be treated as synthetics;

non-resistant fabrics like acrylic and most curtain materials should be treated as delicate fabrics;

the wool programme is designed specifically for pure new wool. Other types of wool and wool mixtures may shrink or felt if machine-washed.

Woollen garments should be spun briefly immediately after washing.

Pre-wash

Pre-wash is not normally necessary. Your new washing machine combined with modern detergents will give perfect washing results without pre-wash, thus saving energy, time, water and detergent.

However, when the laundry is particularly dirty (for example if you have to wash mechanics' overalls or butchers' aprons), you are advised to use pre-wash with a biological detergent.- 5 -

Temperatures

We suggest that white cotton and linen, if it is not excessively soiled, can be washed at 60° instead of 90°C. There should be no reduction in performance, but there will be an energy saving of approximately 30%.

The same applies to a lesser extent to fast coloured garments. They usually require a temperature of 60°C but if they are not excessively dirty, you will have satisfactory results at 40°C. Garments with non-fast colours should not be washed at temperatures above 40°C. If fast and non-fast colours are washed together, they should be treated as non-fast colours and therefore the temperature should not exceed 40°C.

Resistant white and coloured synthetics can normally be washed at 60°C but also in this case 40°C is sufficient if the laundry is not excessively dirty.

Delicate synthetics, synthetics with non-fast colours and woollen garments must never be washed above 40°C.

As you already know, your washing machine can also wash with cold water. However, it must be remembered that the detergents currently on the market have not been designed for cold washes and that in winter, when the water is very cold, they may not dissolve adequately.

We suggest the use of liquid detergents.

How much laundry can be washed in one load?

Strictly speaking you should always weigh your laundry.

The drum will take a maximum of 5 kg of cotton and linen. For synthetics and delicate fabrics, the maximum load is 2,5 kg and for wool, 1 kg.

As weighing can be complicated, we suggest you estimate the weight according to how full the drum is:

cotton and linen : drum full not too tightly packed

resistant synthetics : no more than 2/3 of the drum

delicate fabrics and wool : no more than 1/2 of the drum.

Before placing the laundry in the machine:

mend all tears, holes and ladders;

secure loose buttons and close poppers and zips;

do not wash frayed garments - mend hems before washing;

remove all small objects from pockets. Nails, pins, clips and similar objects can seriously damage your washing machine and laundry;

remove curtain hooks;

wash coloured garments and in particular those with non-fast colours separately when washing for the first time. They are likely to lose colour the first time they are washed.

treat obstinate stains such as grass, rust, tar, paint, ink etc. with a stain remover before washing.

To remove paint stains, for example, use a volatile substance such as turpentine: in this case, you should wait for it to dry completely before washing.

The manufacturer of your washing machine is not responsible for any damage deriving from the use of volatile, inflammable or toxic substances.

At the end of the washing

Damp laundry should be dried as soon as possible after finishing the wash.

Knitwear and woollens should be dried flat away from direct sunlight.

Detergents and additives

Good washing results also depend on the choice of detergent and use of the correct quantities to avoid waste and protect the environment. Although biodegradable, detergents contain substances which in large quantities can damage the delicate ecological balance of nature.

Always use good quality detergents suitable for use in washing machines.

Follow the indications given by the detergent manufacturer according to the weight of laundry, the degree of soil and the hardness of the water in your area; if you do not know how hard it is, ask your local Water Authority.

Powder detergents.

The washing powder should be placed in the appropriate compartments of the dispenser drawer before starting the programme. Special detergents are available for coloured and delicate fabrics and for wool.

"Concentrated" powder detergents

Pour the concentrated powder detergent into the main wash (II) compartment.

Avoid selecting programmes including prewash when concentrated detergents are used.

Liquid detergents

Using the new automatic dispenser for liquid detergents, it is possible to use a liquid detergent for main wash phases.

Liquid detergents can be used instead of powder detergents particularly for lightly soiled laundry and for medium or low temperature washing programmes, while it is better to use a powder detergent for high temperature washing programmes.

Liquid additives

Any liquid additives for softening the laundry must be poured into the compartment III of the detergent dispenser drawer before starting the programme.

The addition of water softener is particularly useful when drying the clothes in a tumble dryer after washing to avoid a static charge.

Bleach Δ

You may use a bleach agent in all the washing programmes. However, make sure that the fabric withstands the treatment. Bleach is automatically washed down into the drum. Pour 1/4 to 1 glass of 12° chl bleach into compartment "Δ" before switching the machine on.

Make sure that the level of the liquid never exceeds the grid.

WASH CODE SYMBOLS

Strong wash WASH	 Max. wash	 Max. wash	 Max. wash	 Max. wash	 Hand	 Do not wash
 BLEACHING	 Bleach in cold water			 Do not bleach		
 IRONING	 Hot iron max. 200°C	 Warm iron max. 150°C	 Lukewarm iron max. 110°C	 Do not iron		
 DRY CLEANING	 Dry cleaning	 Dry cleaning in perchloroethylene petrol,	 Dry cleaning in petrol, pure	 Do not dry clean		
 DRYING	 Flat	 On the line	 On clothes hanger	 Tumble dry	 Do not tumble dry	

Symbols identification on the panel of your washing machine :

I : prewash detergent compartment

II : wash detergent compartment

III : soften detergent compartment

Δ : bleach detergent compartment

⊙ : spinning for cotton programmes (V)

Δ : synthetics programmes

□ : rinse hold

⏸ : draining

⦿ : wool symbol

CLEANING AND MAINTENANCE

 **Make sure that the machine is unplugged and the water tap turned off before undertaking any kind of maintenance.**

Bodywork


The outside of the machine can be cleaned with warm water and a neutral non-abrasive household detergent. Wipe with clean water and dry after cleaning.
Important : do not use methylated spirit, diluents or similar products.
It is advisable, from time to time, to carry out a complete cycle without a washing load, adding a decalcifying product.

The detergent dispenser

The detergent dispenser is very easy to remove. Just turn the two screws 1/4 of a turn and slide the box towards the top (fig.1 and fig.2).

Clean the detergent dispenser under running water with a brush or a piece of rag (fig.3).

Reposition the detergent dispenser into the lid and refix the two screws (fig.4 and fig.5).

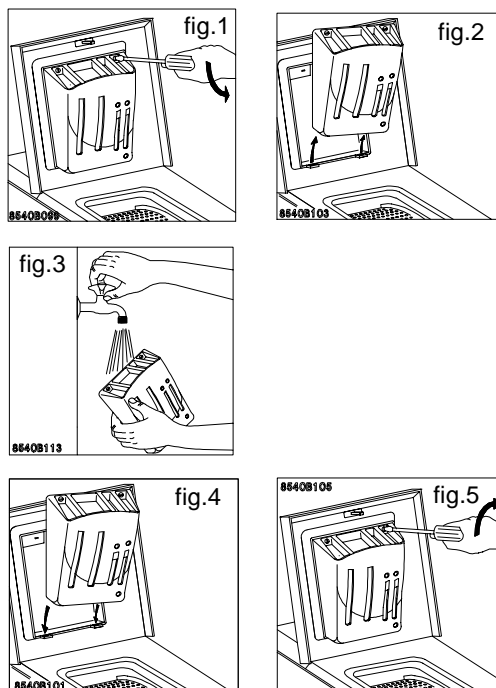

The drain filter


The machine has got a mechanic filter located on the front part to collect lint and small objects (toothpins, coins, pins, etc) inadvertently left in the clothes. It is essential that this filter is cleaned regularly.

Frequency of cleaning depends on the type of articles washed (cleaning should be more frequent if the articles have no hem and tend to fray).

Open the flapdoor covering the filter by pressing the left side of the filter door (fig.1).

Place a container underneath to catch any spillage. According to the models, complete the drain of the appliance by taking away the cap and by extracting the little hose located on the left of the filter (fig.2).

Turn the filter anticlockwise and clean it thoroughly with running water (fig.3).
Refit the filter in the guides and turn it clockwise.
Refit the little hose and the cap, then close the flapdoor.

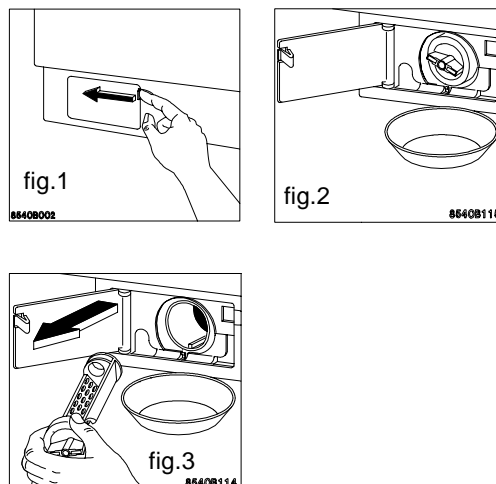

IF SOMETHING DOESN'T WORK ?

Problems	Solutions
The wash results are not as usual	<p>Check that :</p> <ul style="list-style-type: none"> ■ was the wrong quantity or the wrong detergent added ? Insufficient detergent leads to grey washes and scale deposits in the machine. Check the quantities more exactly. ■ were special stains pre-treated ? ■ were programme and temperature correctly chosen?
The washing cycle is very much too long.	<p>Check that :</p> <ul style="list-style-type: none"> ■ the water pression is sufficient ■ the pump filter is not obstructed ■ there has not been a power breakdown
The washing machine stops during a washing cycle.	<p>Check that :</p> <ul style="list-style-type: none"> ■ the water pression is sufficient ■ the pump filter is not obstructed ■ the mains fuse is intact. ■ there is not a rinse hold ending a washing programme for delicate laundry (see the programmes chart page 4).
The machine does not start up	<p>Check that :</p> <ul style="list-style-type: none"> ■ the mains fuse is intact, ■ the appliance is plugged in, ■ the lid is firmly shut. ■ the programme selector dial is correctly positioned, ■ the beginning of the programme has been ordered (on/off pushbutton pushed on). ■ there has not been a power breakdown.
The machine does not drain and/or does not spin	<p>Check that :</p> <ul style="list-style-type: none"> ■ the drain hose is not squashed or bent, ■ the drain filter is not clogged,
The machine does not fill	<p>Check that :</p> <ul style="list-style-type: none"> ■ the inlet water hose is opened and the water pression is sufficient, ■ the lid of the appliance is closed, ■ there has not been a water breakdown
The machine vibrates or is too noisy	<p>Check that :</p> <ul style="list-style-type: none"> ■ all the transit bolts and packing have been removed, ■ all the feet resting firmly on the ground, the lock nuts have been secured, ■ the machine touches something, ■ the load is sufficient.
The machine empties as it fills	<p>Check that :</p> <ul style="list-style-type: none"> ■ the end of the drain hose is too low.
There is water on the floor	<p>Check that :</p> <ul style="list-style-type: none"> ■ there is not too much detergent or unsuitable detergent. The formation of foam can cause water leaks. ■ one of the detergent dispenser is not obstructed ■ the drain hose is well hanged ■ if one of the joints or the tap leaking ? it is not always easy to see as the leak often runs along the hose. ■ is the drain filter cover properly closed ?
Softener detergent flows out the overflow orifice	<p>Check that :</p> <ul style="list-style-type: none"> ■ you have not respected the adviced quantities.

